 





# Safety Technology International

European Office  
Taylor House • 34 Sherwood Road • Bromsgrove  
Worcestershire • B60 3DR • England  
Tel: 44 (0) 1527 520 999 Fax: 44 (0) 1527 501 999  
E-mail: info@sti-emea.com • Web: www.sti-emea.com

USA - Headquarters  
2306 Airport Road • Waterford, Michigan 48327-1209  
Phone: 248-673-9898 • Fax: 248-673-1246  
Toll Free: 800-888-4784 • E-mail: info@sti-usa.com  
Web: www.sti-usa.com

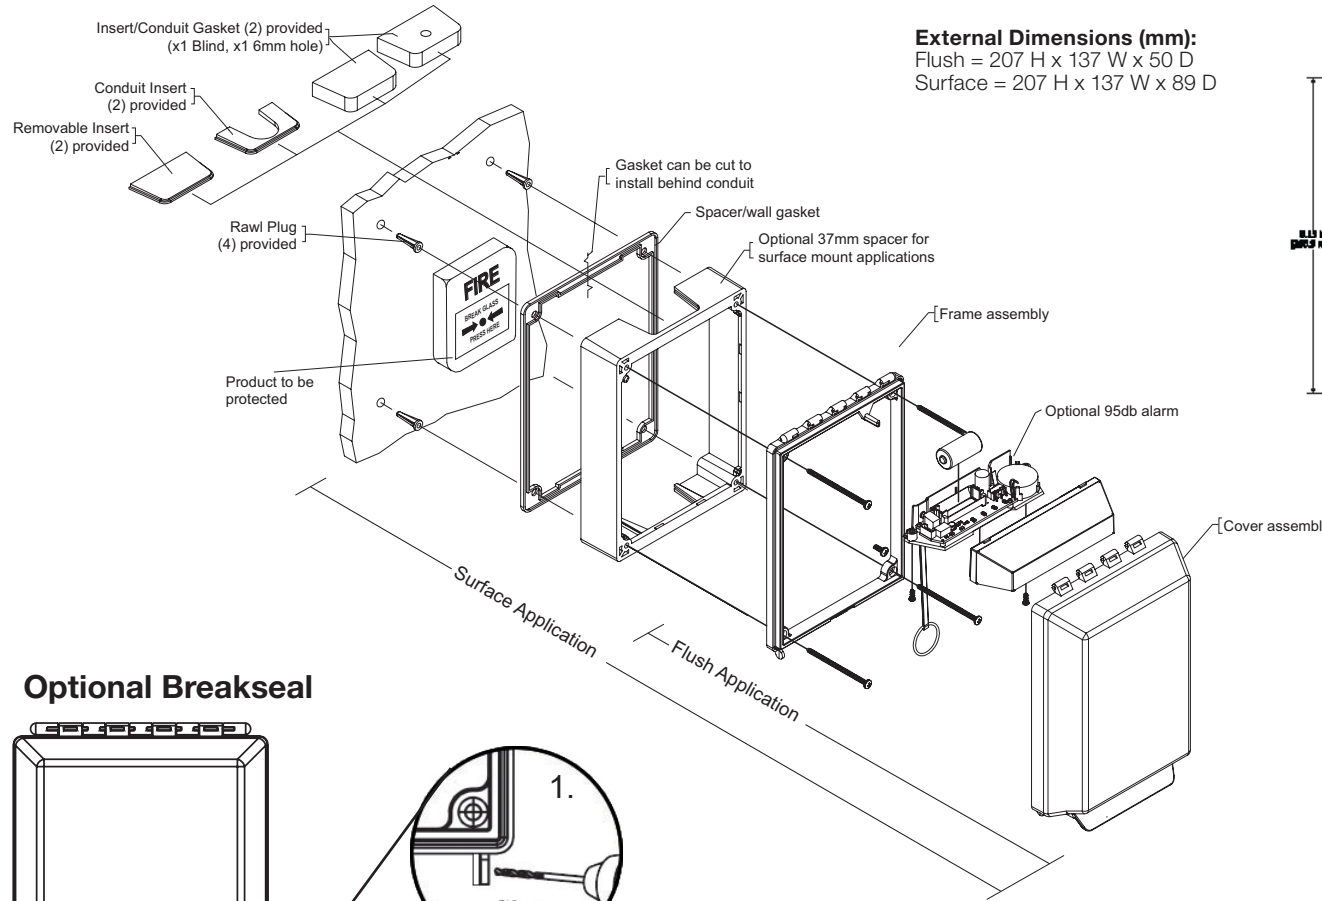

 **External Dimensions (mm):**  
Flush = 207 H x 137 W x 50 D  
Surface = 207 H x 137 W x 89 D

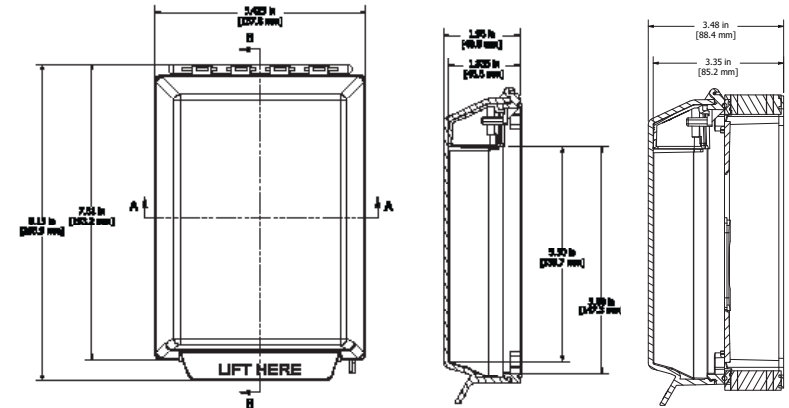

**PRODUCT DIMENSIONS**

 
## INSTALLATION NOTES

**Before drilling mounting holes place spacer, frame and cover over your device. Position it so all aspects of device function properly and cover closes with no interference. If covering a manual call point (MCP) ensure to allow sufficient clearance for re-setting & maintenance.**

1. Mark the position for the 4 fixing screws. Drill the holes using a 6mm masonry drill bit and fit the Universal Stopper with wall fixings provided.
2. If using a Surface mounted spacer, please note that it provides cable entry facilities, for conduit, cable and trunking. A 37mm depth spacer is supplied as standard.
3. Where the weather gasket is required, position this between the spacer (surface) and the wall.
4. Ensure the servicing pin is removed from the alarm unit on those fitted with a sounder. The pin should be retained in the event any maintenance is carried out.

**Three year warranty or a one year limited warranty (from date of purchase) on most products. See website for details. Electronic warranty form at [www.sti-usa.com/wc14](http://www.sti-usa.com/wc14).**

## Optional Breakseal

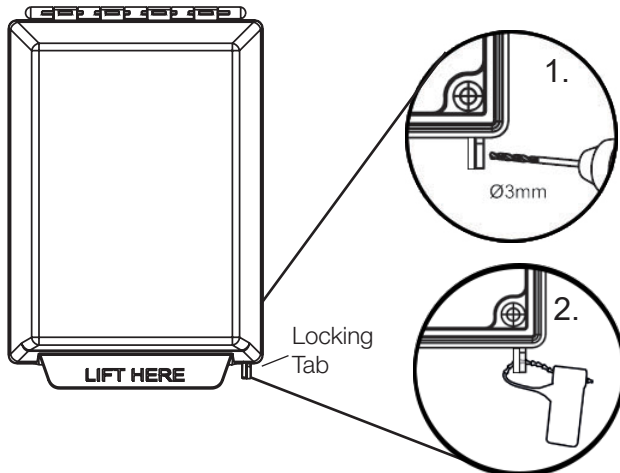

## Replacing the battery (STI-1400 Series with Sounder)

To replace the 3V CR123A battery in the alarm unit, lift the cover and insert the servicing pin to silence the alarm, remove both retainer screws on the alarm unit, rotate the unit away from the cover and replace battery. Reassemble ensuring to remove the servicing pin to rearm the unit. The pin should always be retained.

### Installation Tools Required:

1. 6mm Masonry Drill Bit
2. Philips Head Screw Driver
3. 3mm Drill Bit for Break Seal option

## Universal Stopper Accessories

STI-1331	37mm Spacer
STI-1314	Universal Stopper Backplate
KIT-EA135	Servicing Pin
STI/BS	Breakseals (Quantity. 10)
KIT-1402	Sounder Cartridge

# INSTALLATION OF LOW PROFILE UNIVERSAL STOPPER® STI-1400 Series

All specifications and information shown were current as of publication and are subject to change without notice.