

Safety Technology International

European Office Taylor House • 34 Sherwood Road • Bromsgrove Worcestershire • B60 3DR • England Tel: 44 (0) 1527 520 999 Fax: 44 (0) 1527 501 999 E-mail: info@sti-emea.com • Web: www.sti-emea.com USA - Headquarters 2306 Airport Road • Waterford, Michigan 48327-1209 Phone: 248-673-9898 • Fax: 248-673-1246 Toll Free: 800-888-4784 • E-mail: info@sti-usa.com Web: www.sti-usa.com

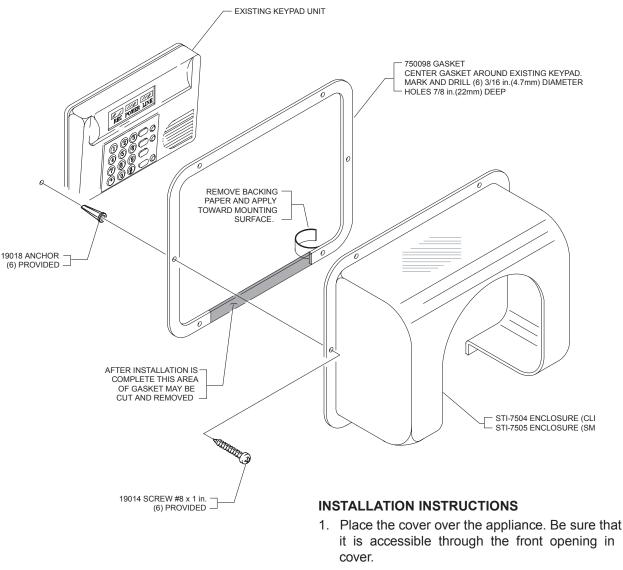

- 2. Mark and drill 7 holes 3/16 in. (4.7mm).
- 3. Complete assembly as shown.

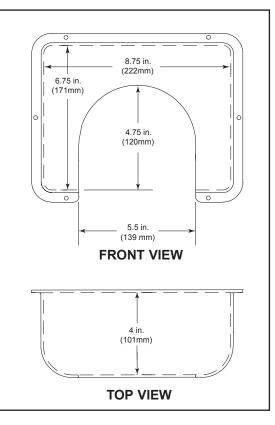

CLEANING INSTRUCTIONS

- 1. Rinse cover with water to remove abrasive dust and dirt.
- 2. Wash with soap or mild detergent using a soft cloth. (DO NOT SCRUB.)
- 3. Rinse once more, then dry with a soft cloth or chamois.
- 4. To remove grease or wet paint, rub gently with a cloth wetted thoroughly with naphtha, then wash and rinse. (DO NOT USE RAZOR BLADES.)

INSTALLATION OF SNOOPER STOPPERS® STI-7504 AND STI-7505

All specifications and information shown were current as of publication, and are subject to change without notice.

STI-750405IS FEB2017