
Installation of Snap In Message Plate Stopper® Station Series Push Button


Rely on STI®

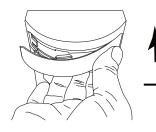

STFP 1

Align tabs located on right side of message plate with slot on right side of shell. Push in.

Slide message plate to the right.

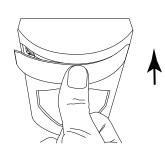

STEP 2

Push in center of message plate.



STEP 3

Push in left side of message plate.



www.sti-usa.com www.sti-emea.com

Printed in USA CP-SS MAY 2019