

European Office

07550WR WIRE SHELF ON AED MODELS (ADJUSTABLE)


Taylor House • 34 Sherwood Road • Bromsgrove Worcestershire • B60 3DR • England

Tel: 44 (0) 1527 520 999 Fax: 44 (0) 1527 501 999 E-mail: info@sti-emea.com • Web: www.sti-emea.com USA - Headquarters

2306 Airport Road • Waterford, Michigan 48327-1209 Phone: 248-673-9898 • Fax: 248-673-1246

Toll Free: 800-888-4784 • E-mail: info@sti-usa.com

Web: www.sti-usa.com

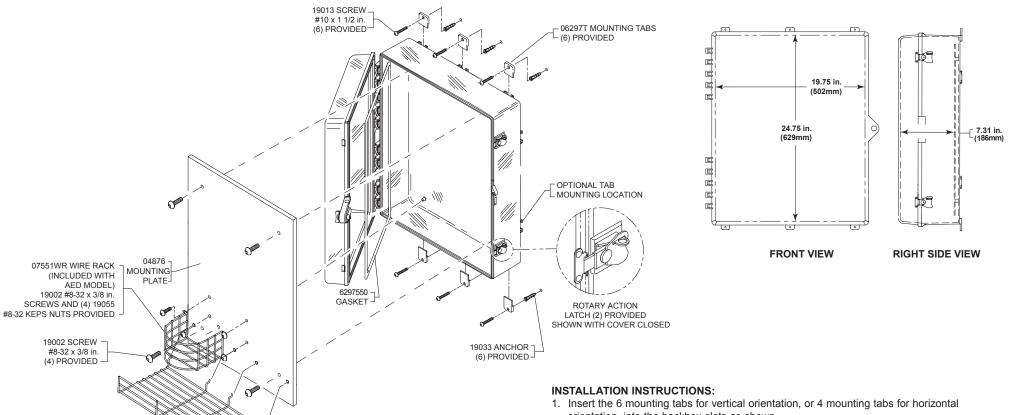



UEHX UL 50 UL 2017 NEMA 4X

- orientation, into the backbox slots as shown.
- 2. Using the installed tabs as a template, mark and drill 6 or 4, 1/4 in. diameter holes and complete installation.

INSTALLATION NOTES:

- 1. Certain devices installed in this enclosure may require supervised high and low temperature limits with the listed operational range of the installed device.
- 2. When replacing the gasket, lubricate it with victaulic brand coupling lubricant only.
- 3. All conduit fittings must be sealed per NEC 70.

CLEANING INSTRUCTIONS:

Rinse with water to remove abrasive dust and dirt. Wash with soap or mild detergent using a soft cloth. (Do not scrub or use brushes or abrasives.) Rinse once more, then dry using a soft cloth or

To remove grease or wet paint, rub gently with a cloth wetted thoroughly with naphtha (do not use razor blades or gasoline) then wash and rinse.

INSTALLATION OF STI-7550, STI-7551 & STI-7551AED PROTECTIVE CABINET

All specifications and information shown were current as of publication, and are subject to change without notice.