Select-Alert Alarm Mini Controller

STI-SA5000 SERIES
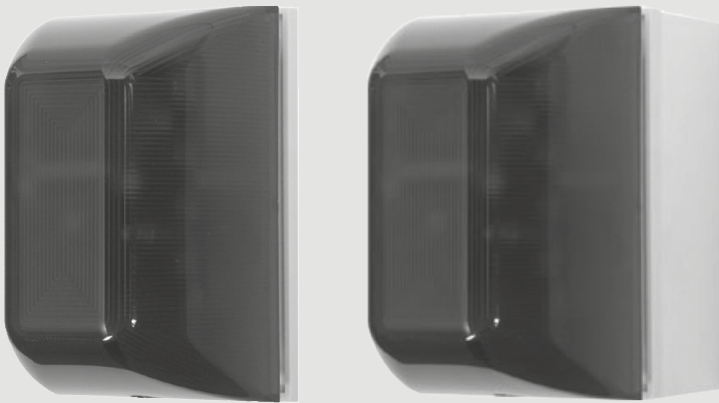
Features

· Use as a cabinet alarm, door alarm, link with push button/switch or as a burglar alarm.
· Independent strobe and siren timing of 15 seconds, 30 seconds, 60 seconds or continuous.
· Durable, polycarbonate construction.
· Includes ten high intensity LED's.
· Siren offers 32 user selectable tones.
· Choose piercing 100 or 85 dB alarm.
· For indoor use only.
· Available with amber, green, blue, red or white lens.
· Includes a tamper switch which triggers the alarm when unit is being removed from a wall.
· Low battery indicator.
· Powered by a 9 VDC battery (not included) or external 12 – 24 volts.
· One Form "C" dry relay contact output.

We protect the things that protect you.®

CONTENTS

SELECT-ALERT ASSEMBLY PARTS LIST

1 - 05000	Electronics Assembly
1 - 05050	Color Lens
4	Screw #6 x 5/8 in.
4	Screw #8-32 x 3/8 in.
2	Screw #6 x 1 1/4 in.
2	Anchor #8-10
2	Screw #6-32 x 1 1/2 in.
1	#8-32 x 1/2 in. tamper screw
1 - 19016	Tamper wrench

ACCESSORIES

KIT-71100A-W	Backbox kit
KIT-E18151	N.C. reed switch and magnet
KIT-SA505	Key switch mounting bracket (includes key switch & 2 keys)
EBAT-9VDC	9 volt battery
KIT-H18075	Additional replacement key

WARNINGS

All units are recommended for indoor use. Unit must be tested periodically to verify the life of battery. STI recommends you change the 9 Volt battery twice a year. When purchasing a Select-Alert, you will need to periodically test the connections to make sure audibles function at a sound level to alert staff. Installer may need to purchase a simple audio-meter, typically available at your local electronics store, to measure the sound in areas where the alarm is expected to be heard during normal noise environment. Results from this test may prove it beneficial to purchase additional Select-Alert units.

All specifications and information shown are current as of publication and subject to change without notice.
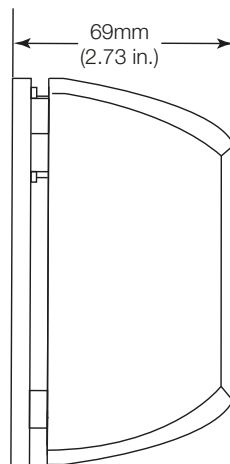
WARRANTY INFORMATION

Three year guarantee against breakage of polycarbonate housing in normal use (one year on electro mechanical and electronic components).

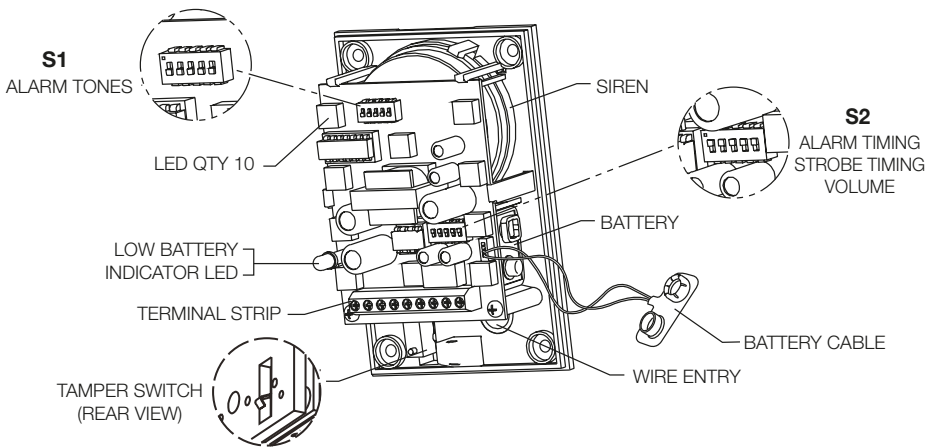Electronic warranty form at www.sti-usa.com/wc14.

DIMENSIONS

FRONT

83mm
(3.25 in.)

123mm
(4.83 in.)

SIDE

69mm
(2.73 in.)
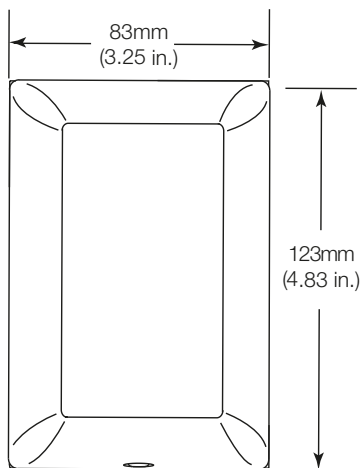
SPECIFICATIONS

Operating Voltage	Internal power 9 VDC battery (not included)
Operating Temperature	32°F-120°
Power Consumption	Stand by: 50µA Siren low volume: 85mA Siren high volume: 90mA Strobe: 25mA
Siren Volume	Low: 85 dB High: 100 dB
Alarm Timing	Independent control for siren and strobe: 15s, 30s, 60s, continuous
Low Battery Warning	LED flash once every 30 seconds
Form C Dry Contacts	0-30VAC/DC, 1 Amp Contacts reset after longest alarm setting
Key Switch	Alarm on: normally closed
Alarm Switch	Stand by: normally open contact required
Polycarbonate Flammability Rating	UL94V-2

INSTALLATION
## Step 1 - Electronic Setup

S1
ALARM TONES

SIREN

S2
ALARM TIMING
STROBE TIMING
VOLUME

LED QTY 10

LOW BATTERY
INDICATOR LED

BATTERY

TERMINAL STRIP

BATTERY CABLE

TAMPER SWITCH
(REAR VIEW)

WIRE ENTRY

Step 2 - Alarm Tones - S1

	1 2 3 4 5				1 2 3 4 5	
* 1	0 0 0 0 0	BUZZ		17	0 0 0 0 1	STANDARD ALARM
2	1 0 0 0 0	SLOW ON/OFF		18	1 0 0 0 1	#3 FAST
3	0 1 0 0 0	SLOW SIREN		19	0 1 0 0 1	#5 SLOW
4	1 1 0 0 0	3 BEEP/PAUSE/REPEAT		20	1 1 0 0 1	FAST BEEP
5	0 0 1 0 0	UFO FAST		21	0 0 1 0 1	SOUND A
6	1 0 1 0 0	FAST SIREN		22	1 0 1 0 1	SOUND B
7	0 1 1 0 0	#5 FAST		23	0 1 1 0 1	SOUND C
8	1 1 1 0 0	#2 MEDIUM		24	1 1 1 0 1	SOUND D
9	0 0 0 1 0	#5 MEDIUM		25	0 0 0 1 1	SOUND D LOUD
10	1 0 0 1 0	SWOOP MEDIUM		26	1 0 0 1 1	SOUND E
11	0 1 0 1 0	#3 MEDIUM		27	0 1 0 1 1	SOUND F
12	1 1 0 1 0	BUZZ TONE		28	1 1 0 1 1	SOUND G
13	0 0 1 1 0	STEADY FAST		29	0 0 1 1 1	SOUND H
14	1 0 1 1 0	SWOOP SLOW		30	1 0 1 1 1	#4 LOW
15	0 1 1 1 0	CONTINUOUS		31	0 1 1 1 1	SOUND K
16	1 1 1 1 0	FAST REPEAT		32	1 1 1 1 1	CONTINUOUS FAST
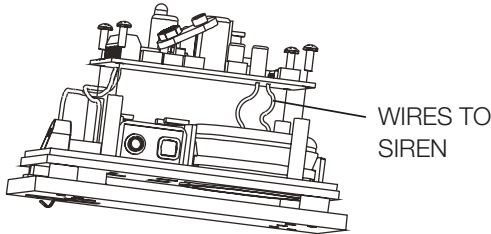
WIRES TO SIREN

NOTE Sound may be disabled by clipping wires to the siren. THIS WILL VOID ALL WARRANTIES. Remove two screws on circuit board; leave enough length of wire to possibly reattach in the future. Then insulate wires to prevent shorting to electronic components.

Step 3 - Alarm Timing and Volume - S2

ALARM TIMING   STROBE TIMING   VOLUME

| | 1 | 2 | 3 | 4 | 5 |

1 ON
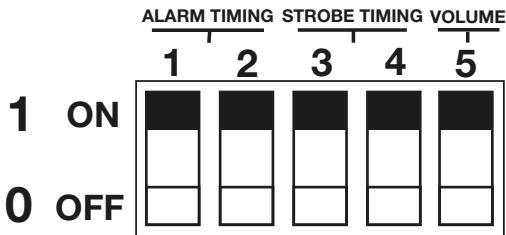
0 OFF

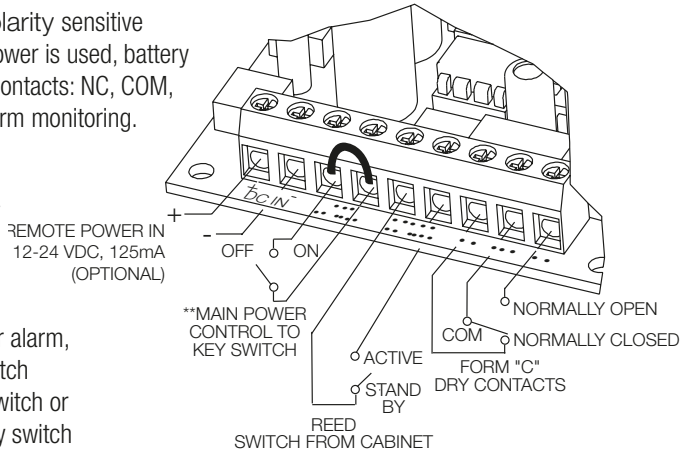| Alarm Timing	Siren		Strobe		Volume
	1	2	3	4	5
* 15 seconds	1	1	1	1	High
30 seconds	1	0	1	0	1
60 seconds	0	1	0	1	Low
Continuous	0	0	0	0	0

1 = ON   0 = OFF

* Factory default settings

Step 4 - Terminal Strip Connections

"DC IN" are the only polarity sensitive terminals. When external power is used, battery will act as a backup. "Dry Contacts: NC, COM, NO" are used for remote alarm monitoring.

**Shipped with jumper wire installed. Remove to add key switch or other main power on/off switch.

If using power only to trigger alarm, add jumper to the alarm switch terminals. If not using key switch or other main power on/off, key switch must also have jumper.
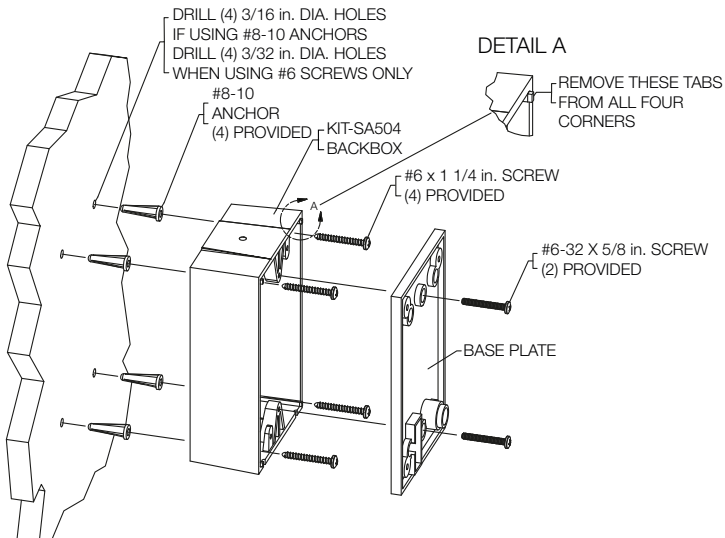
REMOTE POWER IN
12-24 VDC, 125mA
(OPTIONAL)

OFF — ON

**MAIN POWER CONTROL TO KEY SWITCH

ACTIVE

STAND BY

REED SWITCH FROM CABINET

NORMALLY OPEN

COM — NORMALLY CLOSED

FORM "C" DRY CONTACTS

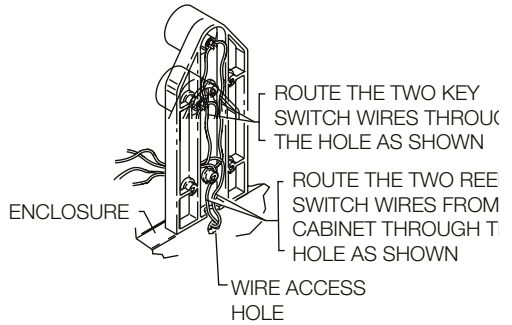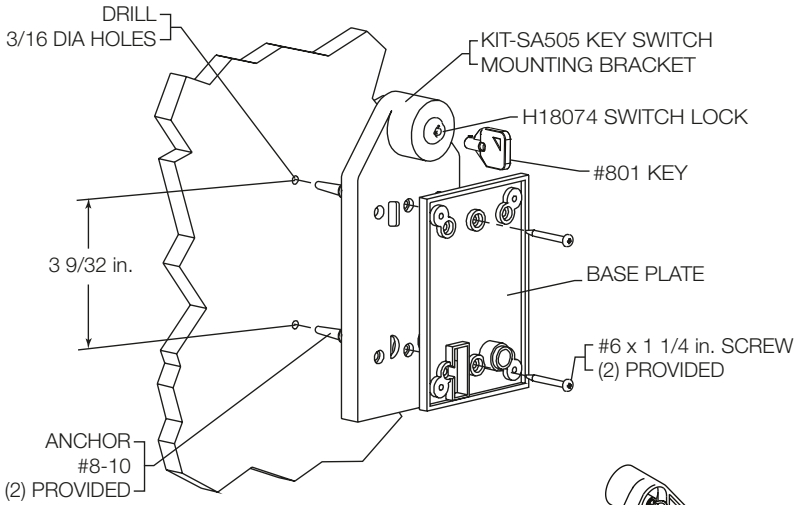## Step 5 - Mounting Options
A) To STI Backbox KIT-71100A-W

1. Using 5/32 drill, drill through the (4) existing holes in back box (one in each corner).
2. Place back box on wall and mark the mounting hole positions.
3. If using #8-10 anchors, drill 3/16 dia. holes 1 in. deep into wall and press anchor into hole. If using #6 screws only, drill 3/32 dia. holes 1 ¼ in. deep.
4. Mount back box to wall using #6 x 1 ¼ in. screws.
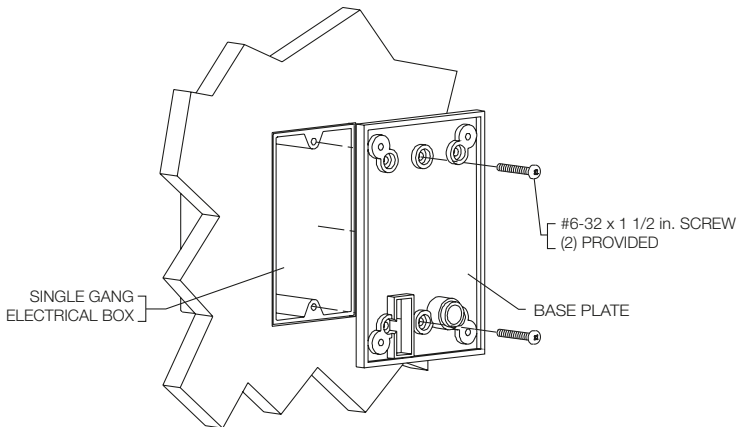5. Mount base plate as shown using (2) #6-32 x 1 in. screws.

Note: If not using STI back box, make sure surface will depress tamper switch.

DRILL (4) 3/16 in. DIA. HOLES
IF USING #8-10 ANCHORS
DRILL (4) 3/32 in. DIA. HOLES
WHEN USING #6 SCREWS ONLY
#8-10 ANCHOR (4) PROVIDED

KIT-SA504 BACKBOX

DETAIL A

REMOVE THESE TABS FROM ALL FOUR CORNERS

#6 x 1 1/4 in. SCREW (4) PROVIDED

#6-32 X 5/8 in. SCREW (2) PROVIDED

BASE PLATE

B) To Key Mount Plate or into Wall without Electrical Box

DRILL
3/16 DIA HOLES

KIT-SA505 KEY SWITCH
MOUNTING BRACKET

H18074 SWITCH LOCK

#801 KEY

3 9/32 in.

BASE PLATE

#6 x 1 1/4 in. SCREW
(2) PROVIDED

ANCHOR
#8-10
(2) PROVIDED

ROUTE THE TWO KEY
SWITCH WIRES THROUGH
THE HOLE AS SHOWN

ROUTE THE TWO REED
SWITCH WIRES FROM
CABINET THROUGH THE
HOLE AS SHOWN

ENCLOSURE

WIRE ACCESS
HOLE

C) To Single Gang Electrical Box

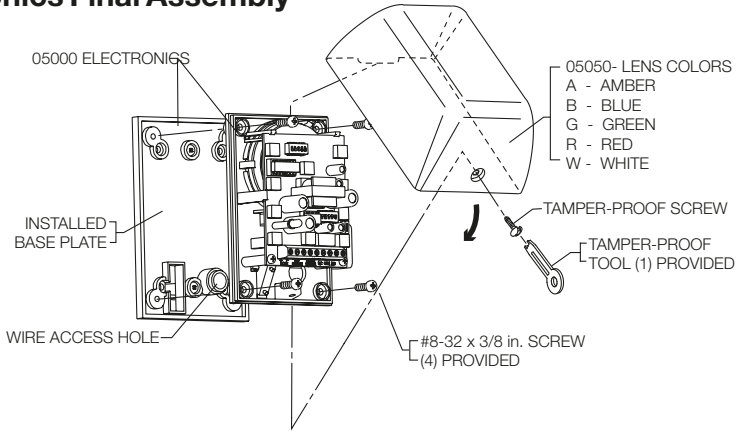#6-32 x 1 1/2 in. SCREW
(2) PROVIDED

SINGLE GANG
ELECTRICAL BOX

BASE PLATE

Step 6 - Electronics Final Assembly

Wiring: After mounting circuit board assembly, connect wires. Refer to terminal strip connections (step 4).

Lens installation: Slide lip of lens behind circuit board mounting plate. Rotate lens into position. Secure with tamperproof screw and special wrench.

05000 ELECTRONICS

INSTALLED BASE PLATE

WIRE ACCESS HOLE

05050- LENS COLORS
A - AMBER
B - BLUE
G - GREEN
R - RED
W - WHITE

TAMPER-PROOF SCREW

TAMPER-PROOF TOOL (1) PROVIDED

#8-32 x 3/8 in. SCREW (4) PROVIDED

Step 7 - Operation

- Turn key switch on to arm.
- Cycle key switch to reset alarm.
- Alarm will sound when cover is removed, unit is removed from the wall or cabinet is opened (alarm switch is electronically closed).
- To service, turn key switch off.

Safety Technology International